


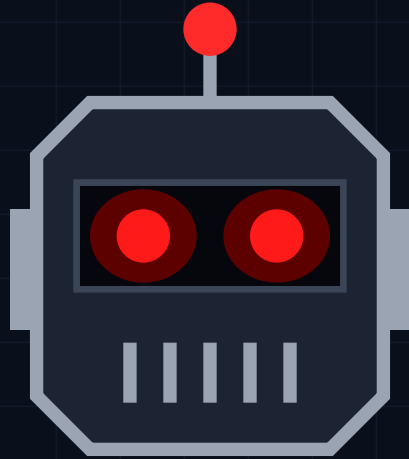

THE SURVEY CALCULATOR

CONVERSIONS · GEODESY · OFFSHORE

User Manual

Survey and offshore calculations and conversions

Contents

1 Introduction	3
2 Getting started	3
2.1 What you need	3
2.2 Installing and starting	4
2.3 The main window	4
2.4 Typing numbers	5
2.5 Closing	5
3 Position	5
3.1 Formats it understands	6
3.2 How a position is read	6
3.3 The results	6
3.4 UTM	7
3.5 UTM to latitude and longitude	7
4 Range & Bearing	8
4.1 Between two grid points	8
4.2 Point from range & bearing	9
4.3 Between two latitudes and longitudes	9
4.4 Position from bearing & distance	9
5 Offsets & KP	10
5.1 Offset to grid position	10
5.2 Grid position to offset	11
5.3 KP and DCC	11
5.4 KP and DCC to position	11
6 Units	12
6.1 Beaufort scale	13
7 Ocean	14
7.1 Sound velocity	14
7.2 Depth and pressure	15
7.3 Layback	15
7.4 Travel time and range	15
8 Time	16
8.1 GPS time and UTC	16
8.2 Day of year	17
9 Calculator	17
10 Accuracy and checks	18
11 Troubleshooting	19

1 Introduction

The Survey Calculator puts the everyday sums and conversions of offshore survey in one place: positions in any format, UTM, ranges and bearings, vessel offsets, KP and DCC, units, sound velocity, depth from pressure, layback, GPS time and a calculator.

There are no Calculate buttons. Every result is worked out again as you type, and every result has a **Copy** button that puts it on the clipboard, ready to paste into another program. Everything you type is remembered for the next time you open the program.

Tab	What it is for
Position	Type or paste a latitude and longitude in any format. The format is detected and the position is shown in every format and in UTM. UTM back to latitude and longitude.
Range & Bearing	Range, bearing and $\Delta E / \Delta N / \Delta Z$ between two grid points; a point from a range and bearing; distance and bearings between two latitudes and longitudes; a position from a bearing and distance.
Offsets & KP	Vessel offsets to grid positions and back; KP and DCC along a route line and back.
Units	Speed (with the Beaufort scale), distance, pressure, angle, volume, mass and temperature.
Ocean	Sound velocity, depth from pressure and back, towfish layback, acoustic travel time and range.
Time	GPS week and seconds to UTC and back, and day of year.
Calculator	A calculator with trigonometry in degrees and a history.

Note

All positions use the **WGS84** datum and UTM projection. If your survey uses another datum (ED50, OSGB36, ETRS89 grids and so on), transform the coordinates in your survey software first, as the difference can be 100 m or more.

2 Getting started

2.1 What you need

- A Windows PC.
- The program file, **SurveyCalculator.exe**. Nothing else needs to be installed.

2.2 Installing and starting

Copy **SurveyCalculator.exe** into a folder of your choice and double-click it. There is no installer.

Tip

For quick access, right-click **SurveyCalculator.exe** and choose **Send to > Desktop (create shortcut)**, or pin it to the Start menu or taskbar.

Note

The first time you start the program, Windows may show a **Windows protected your PC** message. Click **More info**, then **Run anyway**.

2.3 The main window

The screenshot displays the 'THE SURVEY CALCULATOR' application window. The title bar includes the application name and author information: 'Author: Stuart Kleboe © Kleboe Tech Solutions Ltd'. The interface features a top menu bar with 'CONVERSIONS', 'GEODESY', and 'OFFSHORE'. Below this is a tabbed interface with 'Position', 'Range & Bearing', 'Offsets & KP', 'Units', 'Ocean', 'Time', and 'Calculator'. The 'Position' tab is active, showing a text input field for 'ANY POSITION' with the example '37°08'36.6"N 2°04'19.2"W'. Below the input field, it says 'Read as DMS - latitude and longitude' and provides examples of coordinate strings. A table below shows various coordinate formats and their corresponding values, with 'Copy' buttons for each. The table includes columns for 'LATITUDE' and 'LONGITUDE' with rows for 'Decimal degrees', 'Degrees, decimal minutes', 'Degrees, minutes, seconds', 'NMEA (ddmm.mmmm)', and 'Signed decimal degrees'. Below the table, there are dropdowns for 'Decimal places' for degrees, minutes, and seconds. The bottom section is divided into two panels: 'UTM - WGS84' and 'UTM - LATITUDE / LONGITUDE'. The 'UTM - WGS84' panel shows fields for 'Zone', 'Easting', 'Northing', 'Central meridian', 'Grid convergence', and 'Point scale factor'. The 'UTM - LATITUDE / LONGITUDE' panel shows fields for 'Easting', 'Northing', 'Zone', 'Hemisphere', 'Decimal degrees', 'Deg. dec minutes', 'Deg. min, sec', 'Grid convergence', and 'Point scale factor'. A footer note states: 'Results update as you type. Copy buttons put a value on the clipboard.'

The Survey Calculator, showing the Position tab.

- **Title banner** across the top.
- **Tabs** for each set of calculations. The program opens on the tab you used last.
- **Input boxes** (white text) are where you type. **Result boxes** (cyan text, darker background) can't be typed in, but you can select and copy from them.
- A **red message** under a panel says what is missing or wrong, for example a minute value over 60.

- The **status line** at the bottom confirms what was copied.

2.4 Typing numbers

- Use a full stop for decimals: **556152.53**.
- Bearings and headings can be decimal degrees (**45.5**) or degrees, minutes and seconds separated by spaces (**45 30 00**).
- Boxes marked *optional* can be left empty.

2.5 Closing

When you close the program, everything you typed is saved and the web address **KleboeTech.co.uk** is shown for five seconds before it fades away. Click it to close straight away.

3 Position

Type or paste a position into the box at the top of the Position tab. The line under the box says how it was read, and the table shows the position in every format.

ANY POSITION · type or paste it in any format

57°08'36.6"N 2°04'19.2"W

Read as DMS · latitude and longitude

Examples: 57.1435, -2.072 · 57°08.610'N 002°04.320'W · 57 08 36.6 N 2 04 19.2 W · 5708.61,N,00204.32,W · a whole \$GPGGA / \$GPRMC sentence

	LATITUDE	LONGITUDE	
Decimal degrees	57.1435000° N	2.0720000° W	Copy
Degrees, decimal minutes	57° 08.61000' N	2° 04.32000' W	Copy
Degrees, minutes, seconds	57° 08' 36.600" N	2° 04' 19.200" W	Copy
NMEA (ddmm.mmmm)	5708.61000,N	00204.32000,W	Copy
Signed decimal degrees	57.1435000	-2.0720000	Copy

Decimal places: degrees 7 minutes 5 seconds 3

UTM · WGS84

Zone Auto Auto picks the zone from the position

Easting 556155.860 m Copy

Northing 6333741.888 m Copy

Zone 30N

Central meridian -3°

Grid convergence +0.779570° grid N from true N

Point scale factor 0.99963867

UTM LATITUDE / LONGITUDE

Easting 556152.53 m

Northing 6333724.51 m

Zone 30

Hemisphere North

Decimal degrees 57.1433443° N, 2.0720589° W Copy

Deg. dec minutes 57° 08.60086' N, 2° 04.32354' W Copy

Deg. min, sec 57° 08' 36.040" N, 2° 04' 19.412" W Copy

Grid convergence +0.779519°

Point scale factor 0.99963866

WGS84 / UTM. For other datums (ED50, OSGB36...) transform the coordinates in your survey software first.

Results update as you type. Copy buttons put a value on the clipboard.

A position typed in degrees, minutes and seconds, shown in every format and in UTM.

3.1 Formats it understands

Format	Examples
Decimal degrees	57.1435, -2.072 · 57.1435N 2.072W · N57.1435 W2.072
Degrees, decimal minutes	57 08.610 N, 2 04.320 W · 57°08.610'N 002°04.320'W
Degrees, minutes, seconds	57 08 36.6 N 2 04 19.2 W · 57°08'36.6"N 2°04'19.2"W
NMEA (ddmm.mmmm)	5708.6100,N,00204.3200,W · 5708.61 N 00204.32 W
NMEA sentence	a whole \$GPGGA, \$GPRMC, \$GPGLL or \$GPGNS line, pasted from a log
One coordinate	57 08.61 N · -2 04.32 · 5708.61 · 570836.6

3.2 How a position is read

- A **comma** (or semicolon, slash or tab) separates the latitude from the longitude.
- Without a comma, the **N / S / E / W letters** are used to split them. The letters can be before or after the numbers.
- Without commas or letters, the count of numbers decides: two numbers are a decimal pair, four are degrees and minutes, six are degrees, minutes and seconds.
- Within one coordinate, **1 number** is decimal degrees, **2** are degrees and decimal minutes and **3** are degrees, minutes and seconds.
- **S and W**, or a **minus sign**, make a coordinate negative.
- A number too big to be degrees is read as NMEA packed degrees: **5708.61** is 57° 08.61', and **570836.6** is 57° 08' 36.6".
- If there are no letters, the first coordinate is taken as the latitude, unless it is over 90°, when the two are swapped (and a note says so).
- Symbols such as ° ' " and d / m are ignored, so most copied text works as it is.
- If there are no full stops at all, commas between digits are read as decimal points (57°08,610'N).

Tip

If two numbers could be either a decimal pair or one coordinate in degrees and minutes (for example **57 08.61**), they are read as one coordinate and a note says so. Put a comma between a latitude and longitude to make it clear.

Minutes and seconds must be less than 60, and latitudes can't be over 90°; anything that can't be read gives a red message saying why.

3.3 The results

Each row has a **Copy** button that copies the latitude and longitude together. The **Decimal places** settings below the table choose how many places are shown:

Shown to	About	Shown to	About
0.00001° (5 places)	1 m	0.001' (3 places)	2 m
0.000001° (6 places)	0.1 m	0.0001' (4 places)	0.2 m
0.0000001° (7 places)	1 cm	0.00001' (5 places)	2 cm
0.1" (1 place)	3 m	0.001" (3 places)	3 cm

3.4 UTM

For a latitude and longitude, the UTM panel shows the easting and northing, the zone and its central meridian, the grid convergence and the point scale factor.

- **Zone:** Auto picks the zone from the position, including the special zones around Norway and Svalbard. Choose a zone number to force one, for example to keep a project that crosses a zone boundary in one zone. A note warns when the position is outside the normal width of the chosen zone.
- **Grid convergence** (γ) is the angle between true north and grid north. Grid north is γ clockwise from true north; east of the central meridian in the northern hemisphere γ is positive.
- **Point scale factor** (k) is the ratio of a short grid distance to the same distance on the ellipsoid.

$$\text{grid bearing} = \text{true bearing} - \gamma \qquad \text{grid distance} = \text{ellipsoid distance} \times k$$

3.5 UTM to latitude and longitude

Enter an easting, northing, zone and hemisphere to get the latitude and longitude in decimal degrees, degrees and decimal minutes, and degrees, minutes and seconds, with the convergence and scale factor at that point.

4 Range & Bearing

RANGE & BEARING · between two grid points

From point 1

Easting 1 m

Northing 1 m

Height / depth 1 m (optional, + up)

To point 2

Easting 2 m

Northing 2 m

Height / depth 2 m (optional)

Swap points 1 and 2

Results

E (x) m

N (y) m

Z m

Range (horizontal) m

Slope range m

Bearing 1 2 grid

Bearing 2 1 grid

Elevation angle

POINT FROM RANGE & BEARING · grid

Easting m

Northing m

Bearing ° grid (or d m s)

Range m

New point

Easting m

Northing m

E / N m

DISTANCE & BEARING · between two lat / longs (WGS84)

Position 1

Position 2

Any format, as on the Position tab.

Along the ellipsoid (shortest path, geodesic)

Distance m

Distance km / NM

Initial bearing true

POSITION FROM BEARING & DISTANCE · WGS84

From position

Bearing ° true (or d m s)

Distance m

New position

Decimal degrees

Deg. dec minutes

Deg. min. sec

Range and bearing between two grid points, a point from a range and bearing, and distances between latitudes and longitudes.

4.1 Between two grid points

Enter the easting and northing of two points. If you also enter both heights (positive up, so a depth is negative), the vertical difference, the slope range and the elevation angle are worked out too. **Swap points 1 and 2** exchanges them.

Result	Meaning
$\Delta E (x), \Delta N (y)$	Easting and northing of point 2 minus point 1
ΔZ	Height of point 2 minus point 1
Range (horizontal)	$\sqrt{(\Delta E^2 + \Delta N^2)}$
Slope range	$\sqrt{(\text{range}^2 + \Delta Z^2)}$
Bearing 1 → 2	Grid bearing from point 1 to point 2, in degrees and in d m s
Bearing 2 → 1	The reverse bearing ($\pm 180^\circ$)
Elevation angle	The angle above (+) or below (–) horizontal, and the gradient in ‰

© Kleboe Tech Solutions Ltd

Page 8

4.2 Point from range & bearing

Enter a start point, a grid bearing and a horizontal range to get the easting and northing of the new point, and its ΔE and ΔN from the start.

4.3 Between two latitudes and longitudes

Type each position in any format, as on the Position tab. Two results are given:

- **Along the ellipsoid:** the shortest distance over the WGS84 ellipsoid (a geodesic, worked out with Vincenty's formulae, to millimetres), with the true bearing at the start and at the end. On a long line the two bearings differ because the shortest path curves.
- **Rhumb line:** the distance and the single true bearing of a line that crosses every meridian at the same angle, the line a vessel steering a constant course follows. It is a little longer than the geodesic.

4.4 Position from bearing & distance

Enter a start position, a true bearing and a distance along the ellipsoid to get the new position, and the bearing at the far end.

Note

Grid bearings (from eastings and northings) and true bearings (from latitudes and longitudes) differ by the grid convergence. See section 3.4.

Vessel offsets to grid and back, and KP and DCC along a route line.

5.2 Grid position to offset

The reverse: enter the CRP, the heading and the point's easting and northing to get its X and Y offsets, the range and bearing from the CRP and the **relative bearing** (the angle off the bow, + to starboard, – to port).

Tip

Use this to check a dimensional-control survey, or to find where an ROV or a target is relative to the vessel.

5.3 KP and DCC

Enter a route line's start and end eastings and northings and the KP at its start (in km). For any position you get:

- **KP**: the distance along the line from its start, in km, plus the start KP.
- **DCC** (distance cross course): the distance off the line in metres, **+ to the right** and **–** to the left, looking along the line in the direction of increasing KP.
- A note if the point is before the start or past the end of the line.

The panel also shows the line's length and grid bearing.

5.4 KP and DCC to position

Enter a KP and DCC to get the easting and northing of that point, using the same route line.

Note

The KP panels use one straight line. For a route with bends, enter the start and end of the straight section the point is on, with that section's start KP.

6 Units

Type a value in any box of a panel and all the other boxes in that panel convert straight away. Each box has its own Copy button.

SPEED

knots	25	Copy
m/s	12.86111111	Copy
km/h	46.3	Copy
mph	28.7694862	Copy
ft/s	42.19524643	Copy

Beaufort scale

Force: 6 - Strong breeze

Sea: Large waves, white foam crests, some spray

Probable wave: 3 m

Force speed: 6 Strong breeze: 22–27 kn (11.3–14.1 m/s)

DISTANCE

m	1000	Copy
km	1	Copy
nautical miles	0.5399568035	Copy
statute miles	0.6213711922	Copy
feet (international)	3280.839895	Copy
US survey feet	3280.833333	Copy
yards	1093.613298	Copy
fathoms	546.8066492	Copy
cables (0.1 NM)	5.399568035	Copy
inches	39370.07874	Copy

PRESSURE

bar	1	Copy
dbar	10	Copy
mbar / hPa	1000	Copy
kPa	100	Copy
MPa	0.1	Copy
psi	14.50377377	Copy
atm	0.9869232667	Copy
Pa	100000	Copy

ANGLE

degrees	1	Copy
radians	0.01745329252	Copy
gons (grads)	1.111111111	Copy
mils (6400)	17.77777778	Copy
arc minutes	60	Copy
arc seconds	3600	Copy

VOLUME

m³	0.1589872949	Copy
litres	158.9872949	Copy
barrels (oil)	1	Copy
US gallons	42	Copy
imperial gallons	34.97231575	Copy
ft³	5.614583333	Copy

MASS

kg	1000	Copy
tonnes	1	Copy
lb	2204.622622	Copy
long tons (UK)	0.9842065276	Copy
short tons (US)	1.102311311	Copy

Results update as you type. Copy buttons put a value on the clipboard.

Unit conversions. Typing 25 knots shows Beaufort force 6.

Panel	Units
Speed	knots, m/s, km/h, mph, ft/s
Distance	m, km, nautical miles (1852 m), statute miles, international feet (0.3048 m), US survey feet (1200/3937 m), yards, fathoms (1.8288 m), cables (185.2 m), inches
Pressure	bar, dbar, mbar / hPa, kPa, MPa, psi, atm, Pa
Angle	degrees, radians, gons (400 to a circle), mils (6400), arc minutes, arc seconds
Volume	m³, litres, oil barrels (158.987 l), US gallons, imperial gallons, ft³
Mass	kg, tonnes, lb, long tons (UK), short tons (US)
Temperature	°C, °F, K

6.1 Beaufort scale

The Speed panel shows the Beaufort force, its name, the sea it raises and the probable wave height for the wind speed typed. **Force** → **speed** shows the range of wind speeds for any force.

Force	Name	Knots	Sea	Wave (m)
0	Calm	under 1	Like a mirror	0
1	Light air	1–3	Ripples	0.1
2	Light breeze	4–6	Small wavelets	0.2
3	Gentle breeze	7–10	Large wavelets	0.6
4	Moderate breeze	11–16	Small waves, white horses	1
5	Fresh breeze	17–21	Moderate waves, many white horses	2
6	Strong breeze	22–27	Large waves, some spray	3
7	Near gale	28–33	Sea heaps up, foam in streaks	4
8	Gale	34–40	Moderately high waves, spindrift	5.5
9	Strong gale	41–47	High waves, dense foam	7
10	Storm	48–55	Very high waves, sea looks white	9
11	Violent storm	56–63	Exceptionally high waves	11.5
12	Hurricane	64 +	Air full of foam and spray	14 +

7 Ocean

SOUND VELOCITY - from temperature, salinity and depth

Temperature °C

Salinity PSU

Depth m

Latitude ° (for depth → pressure)

Chen & Millero m/s (UNESCO 1983) Copy

Del Grosso m/s (1974) Copy

Mackenzie m/s (1981) Copy

Pressure used dbar

DEPTH PRESSURE - UNESCO 1983 seawater

Pressure dbar

Latitude °

☐ Pressure is absolute (includes the atmosphere, 10.1325 dbar)

Depth m Copy

Depth m

Pressure dbar (gauge) Copy

Pressure / Copy

LAYBACK - towed body (straight cable)

Cable out m

Towfish depth m below the surface

Tow point height m above the surface

Layback m (from the tow point) Copy

Vertical drop m

Cable angle below horizontal

A straight cable gives the longest layback; a real cable sags, so the true layback is a little shorter.

TRAVEL TIME RANGE - acoustics

Sound velocity m/s

Two-way travel time ms

Range m Copy

Range m

Range m

Two-way time ms Copy

One-way time ms

Results update as you type. Copy buttons put a value on the clipboard.

Sound velocity, depth and pressure, layback, and travel time.

7.1 Sound velocity

Enter the water temperature, salinity and depth (and the latitude, used to turn the depth into pressure). Three standard formulas are given side by side:

Formula	Notes
Chen & Millero (UNESCO 1983)	The international standard, used by most CTD and SV software. Uses pressure.
Del Grosso (1974)	Often preferred in deep water. Uses pressure.
Mackenzie (1981)	A simpler formula from depth. Agrees with the others to within a few tenths of a m/s in normal sea water.

A message warns when the temperature, salinity or depth is outside the range the formulas were made for.

7.2 Depth and pressure

Depth from pressure uses the UNESCO 1983 formula for sea water (Saunders and Fofonoff), which allows for the change of gravity with latitude and depth. Pressure from depth uses the same formula the other way round.

- Pressures are **gauge** pressures in dbar (0 at the sea surface), as from most CTDs and depth sensors.
- Tick **Pressure is absolute** if the reading includes the atmosphere; 10.1325 dbar is taken off before working out the depth.
- 1 dbar is very close to 1 m of sea water, but not exactly: at 1000 m the difference is about 10 m.

7.3 Layback

For a towed body (side-scan, magnetometer, sub-bottom towfish), enter the cable out, the towfish depth and the height of the tow point above the water. The layback is the horizontal distance from the tow point to the towfish:

$$\text{vertical drop} = \text{towfish depth} + \text{tow point height} \qquad \text{layback} = \sqrt{(\text{cable}^2 - \text{drop}^2)}$$

This assumes a straight cable, which gives the longest possible layback. A real cable sags, so the true layback is a little shorter; the cable angle is shown as a guide.

7.4 Travel time and range

$$\text{range} = \text{two-way travel time} \times \text{sound velocity} \div 2$$

Enter the sound velocity and a two-way travel time in milliseconds to get the range, or a range to get the two-way and one-way times.

8 Time

The screenshot displays the 'Time' section of the Survey Calculator interface, which is divided into two main panels: 'GPS TIME' and 'UTC'.

GPS TIME Panel:

- GPS week:** 2389 (with a note 'weeks since 6 Jan 1980')
- Seconds of week:** 345600 (with a unit 's')
- Leap seconds:** 18 (with a note 'GPS - UTC (18 since 2017)')
- UTC:** 2025-10-22 23:59:42,000 (with a 'Copy' button)
- Day:** Wednesday, day 295

UTC Panel:

- UTC date & time:** 2026-10-18 01:35:46 (with a 'Now' button)
- GPS week:** 2441 (with a 'Copy' button)
- Seconds of week:** 5764,000 (with a unit 's' and a 'Copy' button)
- Day of week:** 0 (with a note '0 = Sunday')
- Day of year:** 291
- Unix time:** 1792287346,000 (with a unit 's since 1970' and a 'Copy' button)

DAY OF YEAR Panel:

- Year:** 2026
- Day number:** 291 (with a range '1 - 366')
- Date:** Sunday 18 October 2026 (with a 'Copy' button)
- Date day number:** 2026-10-18 (with a format 'yyyy-mm-dd' and a 'Copy' button)

At the bottom of the interface, a small note states: 'Results update as you type. Copy buttons put a value on the clipboard.'

GPS time, UTC and day of year.

8.1 GPS time and UTC


GPS receivers and many survey logs count time in **GPS weeks** since 6 January 1980 and **seconds of the week** (from midnight Saturday / Sunday). GPS time does not include leap seconds, so it is ahead of UTC.

- **GPS time → UTC:** enter the week and seconds of week to get the UTC date and time.
- **UTC → GPS time:** enter a UTC date and time (2026-10-18 14:30:00), or press **Now**, to get the GPS week, seconds of week, day of week (0 = Sunday), day of year and Unix time.
- **Leap seconds** is 18 (GPS – UTC since 1 January 2017). If a new leap second is announced, change this box.

8.2 Day of year

Turn a day number (1 to 366) into a date for any year, or a date into its day number, as used in many log file names and in GNSS data.

9 Calculator

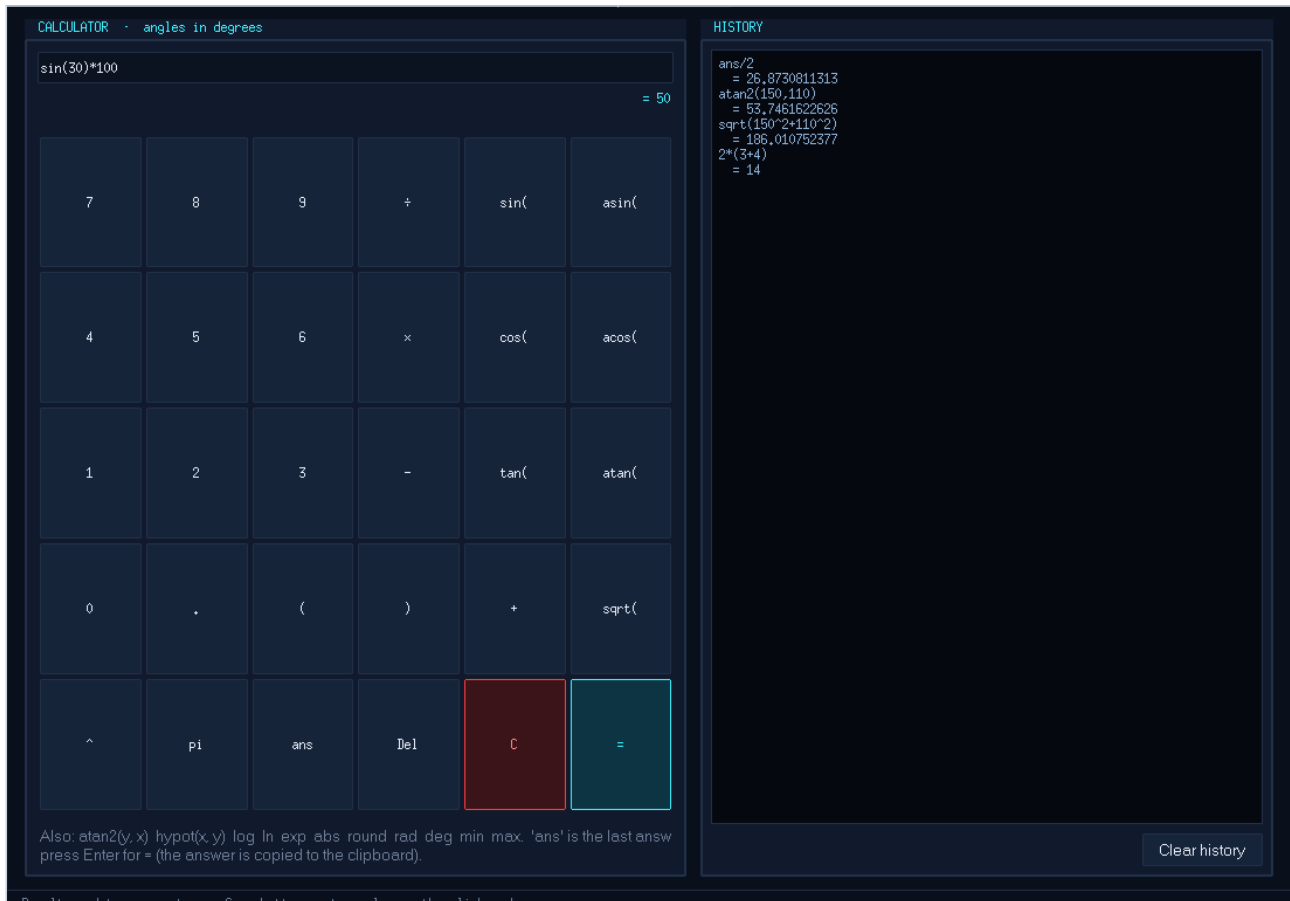

The calculator, with the history of earlier sums.

Type a sum in the box, or use the keys, and press **Enter** or **=**. The answer is shown as you type, added to the history when you press Enter, and copied to the clipboard.

Type	To get
+ - * / ^ ()	add, subtract, multiply, divide, power, brackets (× and ÷ work too)
sin cos tan	trigonometry, with angles in degrees
asin acos atan atan2(y, x)	inverse trigonometry, answers in degrees
sqrt hypot(x, y)	square root; $\sqrt{x^2 + y^2}$
log ln exp	log base 10, natural log, e to the power
abs round floor ceil min max	the usual meanings
rad(x) deg(x)	degrees to radians, radians to degrees
pi e	the constants
ans	the answer to the last sum

Tip

atan2(ΔE, ΔN) gives a bearing from coordinate differences, for example **atan2(150, 110) = 53.746°**. Add 360 if the answer is negative.

10 Accuracy and checks

The calculations have been checked against published test values:

Check	Published	The Survey Calculator
Vincenty geodesic test line (Flinders Peak to Buninyong)	54 972.271 m	54 972.271 m
UNESCO sound speed, S 40, T 40 °C, 10 000 dbar	1731.995 m/s	1731.995 m/s
Mackenzie sound speed, T 25 °C, S 35, 1000 m	1550.744 m/s	1550.744 m/s
UNESCO depth, 10 000 dbar at 30°	9712.653 m	9712.653 m
UTM northing on the central meridian at 60° N	6 651 411.19 m	6 651 411.19 m

- UTM uses the Krüger series, accurate to better than a millimetre across the whole zone; UTM to latitude and longitude and back returns the same position.
- Geodesic distances are on the WGS84 ellipsoid, accurate to well under a millimetre. Points almost exactly opposite each other on the Earth can't be worked out and give a message.
- Grid ranges and bearings are plane (grid) values. Over long distances, ground distances differ by the scale factor.

11 Troubleshooting

Problem	What to check
A red message under a panel	It says what is missing or wrong. Fill in the boxes it names, or correct the value.
The position is read the wrong way round	Add N / S / E / W letters, or put the latitude first with a comma between them.
Two numbers are read as one coordinate	Put a comma between the latitude and longitude, or give both decimal points (57.1435, -2.072).
UTM looks a long way out	Check the datum: positions here are WGS84. Check the zone, and the hemisphere for UTM back to latitude and longitude.
Bearings differ from the survey software	Grid and true bearings differ by the grid convergence (section 3.4).
A comma decimal (1,5) isn't accepted	Use a full stop for decimals in number boxes.